


↑
EDGE

⊕
**DRILL
HOLE**

**LDCO800
BBU Battery Backup Unit
Retrofit Mounting Template**

**DRILL
HOLE**

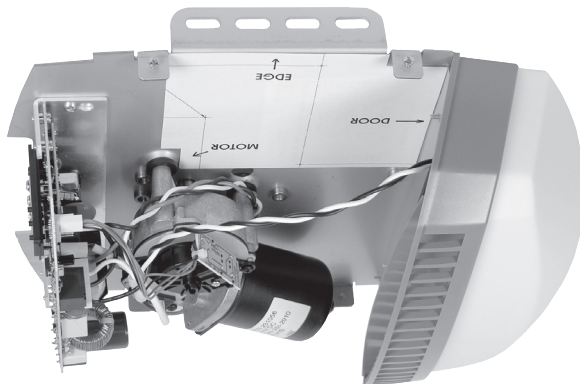

DOOR →

MOTOR



**DRILL
HOLE**



1. Align template inside operator
2. Drill three holes for mounting BBU
3. Discard template
4. Mount BBU with #6 screws with locking hardware